

 
# Bush 4GB MP3 Player

## MP3 Player Guide

This player is available from [Argos](#) (click to see product)

### How to use the player

Your music player only has a few controls. The picture below shows what each control does.

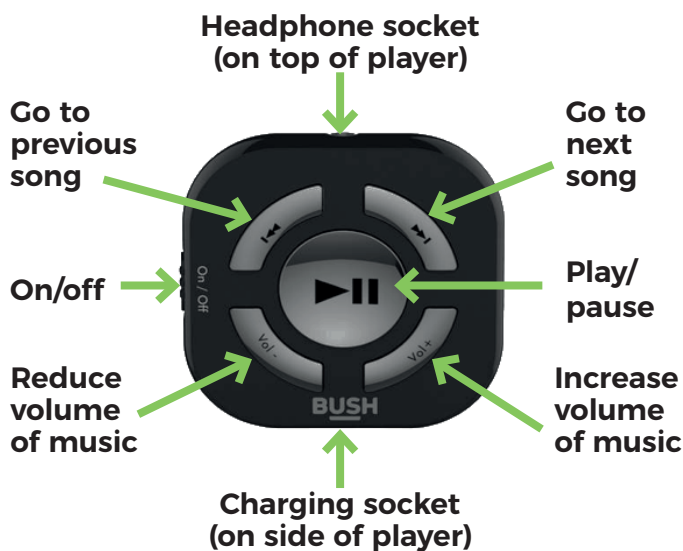

### How do I use a splitter cable?

The splitter cable allows two people to listen to the music player at the same time.



To use:

1. Plug one end of the splitter cable into the music player.
2. Plug your headphones into the other end of the splitter cable.

Where to buy:

- **Argos** (click to see product)
- **Amazon** (click to see product)

### How do I play music?

1. Slide the on/off switch to the 'on' position
2. Plug in your headphones and put them on.
3. Press the play/pause button to start playback. The player will remember the last song you played and will start playback from there.
4. To stop playback press the play/pause button again.
5. When you are finished remember to switch the player off again by sliding the on/off switch to the 'off' position.

### How do I make the player louder or quieter?

- To make your music louder press the 'Vol+' button.
- To make your music quieter press the 'Vol-' button.

You can do either of these while your music is playing or while the player is paused.

### How do I find a different song?

- To find a song press the 'go to next song' button or 'go to previous song' button.
- These buttons step forward or backward through the list of songs on your player.
- Keep pressing until you find the song you want.

If you have a lot of songs on your player it might help to keep a printed list of the songs it contains so it's easier to find a specific song.

### How do I charge the battery?

1. Plug small end of the charging cable into the music player.
2. Plug the large end of the charging cable into the charging plug.
3. Plug the player into a power socket.
4. There is a small light on the side of the player that flashes when the player is charging. When the battery is fully charged the light stays bright red.
5. When the player is charged take the plug out of the wall socket and pull the cable out of the player. Your player is ready to use.

Don't worry if you leave the player in the wall socket too long. You won't damage it. If you like, you can charge the player overnight.